


40W Max E14 SES (required)
Dimmable
FCL-80433

Caution : Always turn off light and allow light fitting components to cool completely before assembly / disassembly

Assembly Instructions

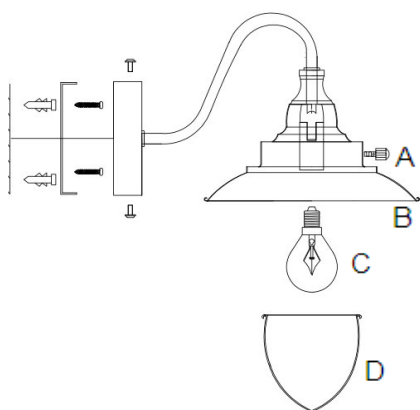

Step 1 : Insert a bulb C (not supplied)

Step 2 : Unscrew the nut A (x3) from the shade B and fix the glass D onto shade using nuts A(x3).

To avoid damage please do not screw the nuts too hard when fixing glass shade .

How to Replace Light Bulb

Step 1: Unscrew the nut A (x3) and take the glass D out from the top shade B carefully.

Step 2: Remove old bulb and insert new bulb C (not supplied)

Step 3: Fix glass D back onto shade using nuts A (x3)

To avoid damage please do not screw the nuts too hard when fixing glass shade .